










TD560BCH

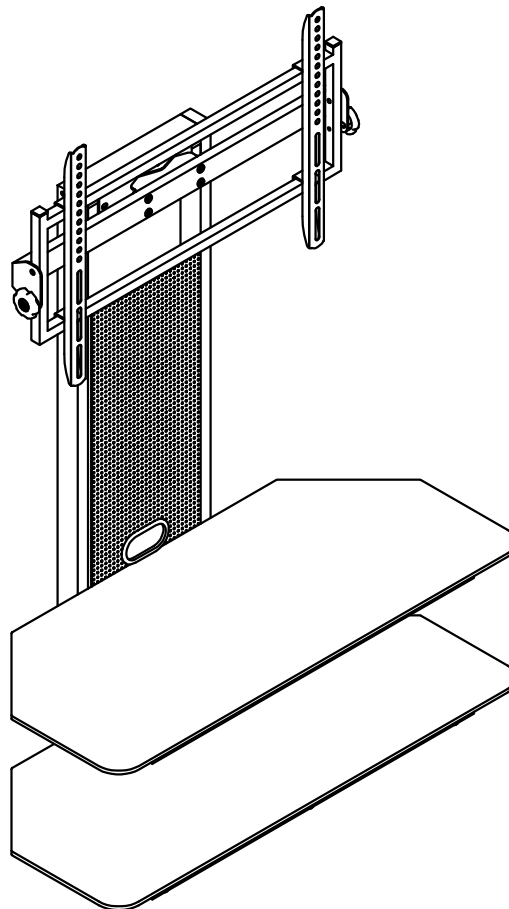


If you have any missing parts or questions please email
info@transdecointl.com or call 909-606-3833
Mon - Fri 9 AM to 5 PM pacific time. Please have your product model
number available.



NO.	DESCRIPTION	Q TY
A	 M6x12mm	4
B	 M6x22mm	6
C	 M6x42mm	12
D	 M6*32mm	4
E	 M6*18mm	4 Set
F	 M4x15mm	6
G	 M6	5
H	 Ø12x3.5	14
I	 Ø23	2
J	 M4	1
K		6
L		1
M		2

NO.	DESCRIPTION	Q TY
N		1
O		1
P		1
Q		2
R		1
S		1
T		1
U	 T=6mm	2


TV Mounting Hardware

NO.	DESCRIPTION	Q TY
S1	 M4x12mm	4
S2	 M5x12mm	4
S3	 M6x12mm	4
S4	 M8x12mm	4
S5	 M4x32mm	4
S6	 M5x32mm	4
S7	 M6x32mm	4
S8	 M8x32mm	4
S9	 Ø19xØ6.2	4
S10	 Ø22xØ8.2	4
S11	 Ø14x14mm	4
S12	 Ø25x13mm	4
S13	 Ø25x2mm	4

STEP 1

- Attach part R to part L;
- Attach part S to part L;
- Install part M and part G as shown;


* For easy assembly please do not tighten the screws until Step 2 completed.

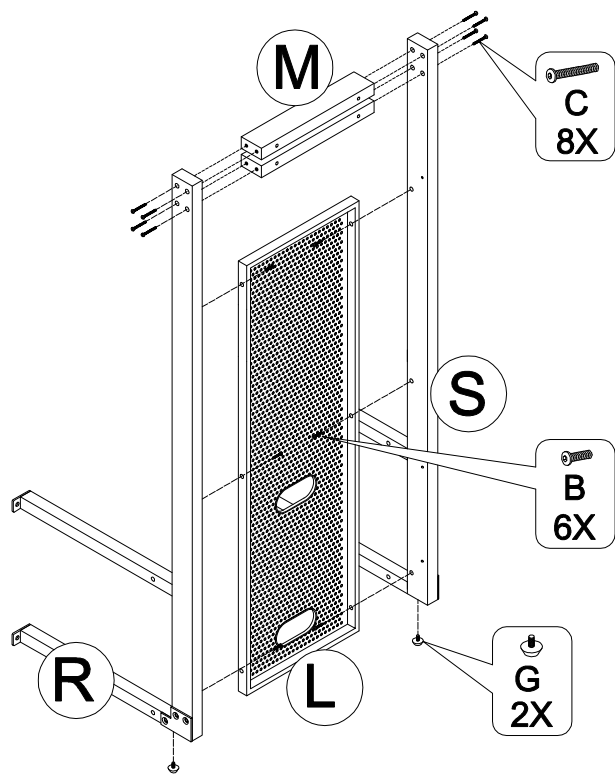

STEP 2


- Install part G to the bottom support frame (part P);
- Attach part P to the main structure;
- Install the top shelf support frame(part O) as shown;

* Tighten all the screws.

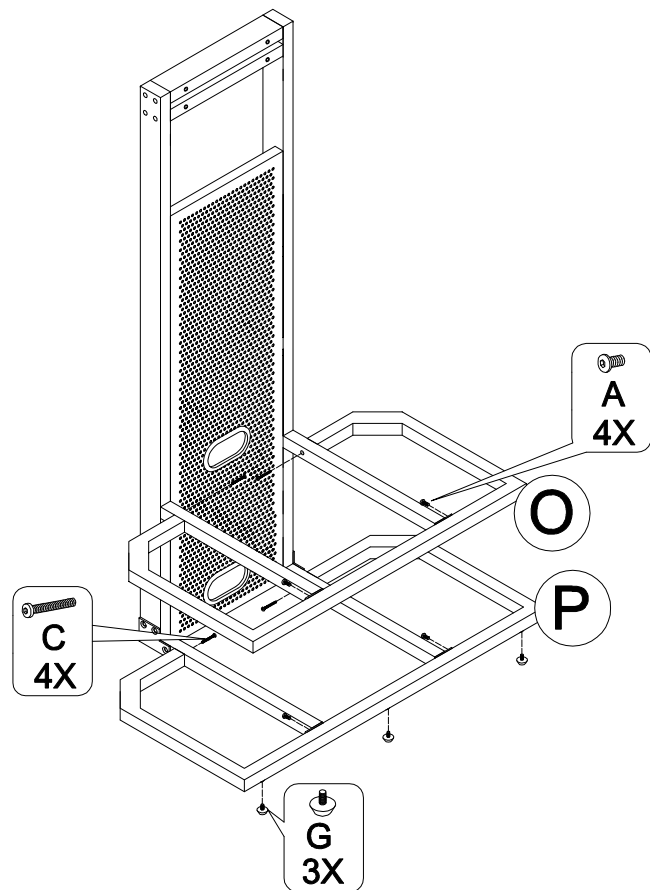


STEP 3

- Install the pivoting device (part N) as shown;
- Level the device and tighten all the screws.

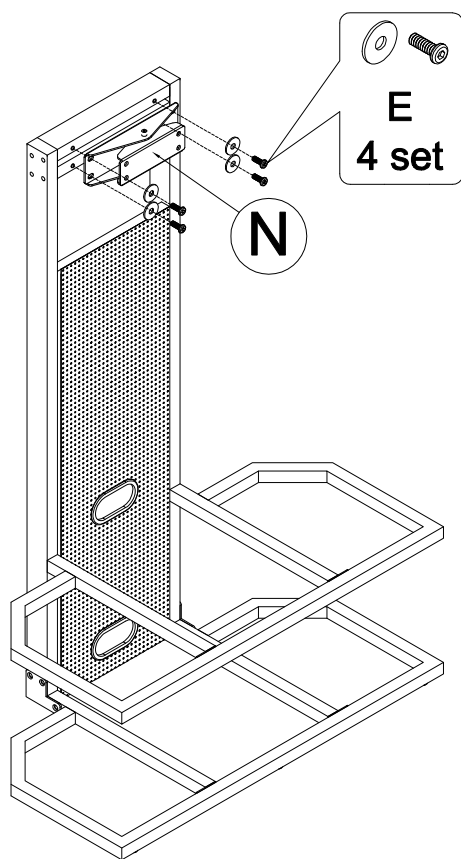


STEP 4

- Install the main mounting bracket as shown;
- Level the mounting bracket and tighten all the screws;
- Affix the silicon on the top and the bottom shelf as shown.

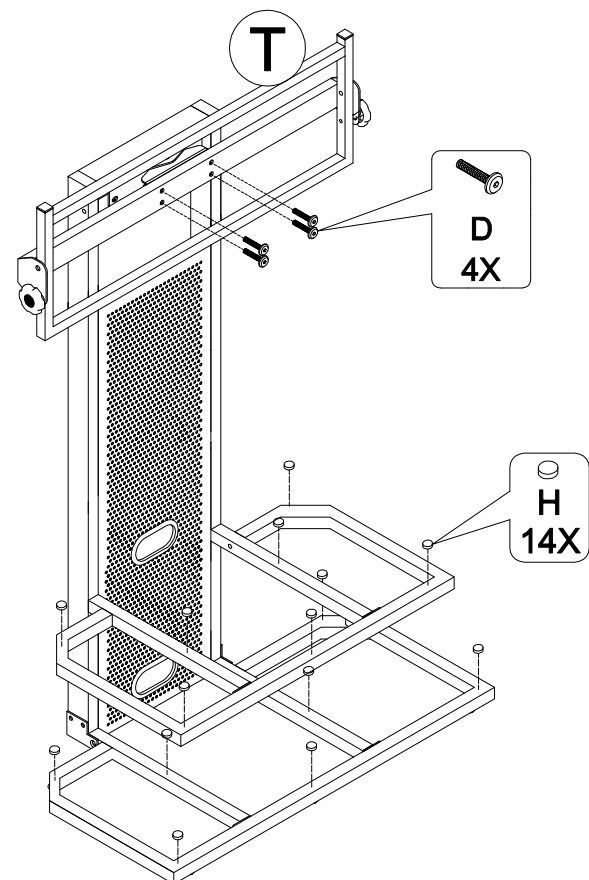


STEP 5

- Install the wire managment clip(part K) as shown.

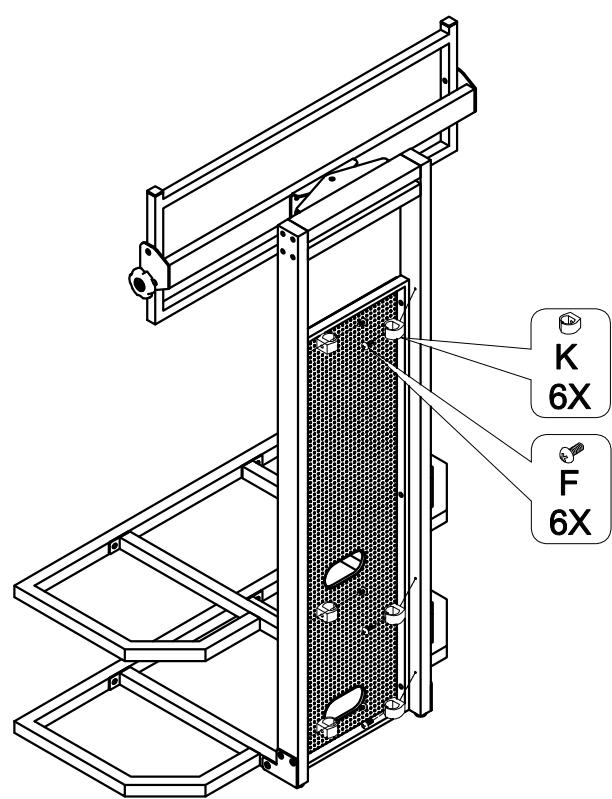


STEP 6

- Install the glass shelves.

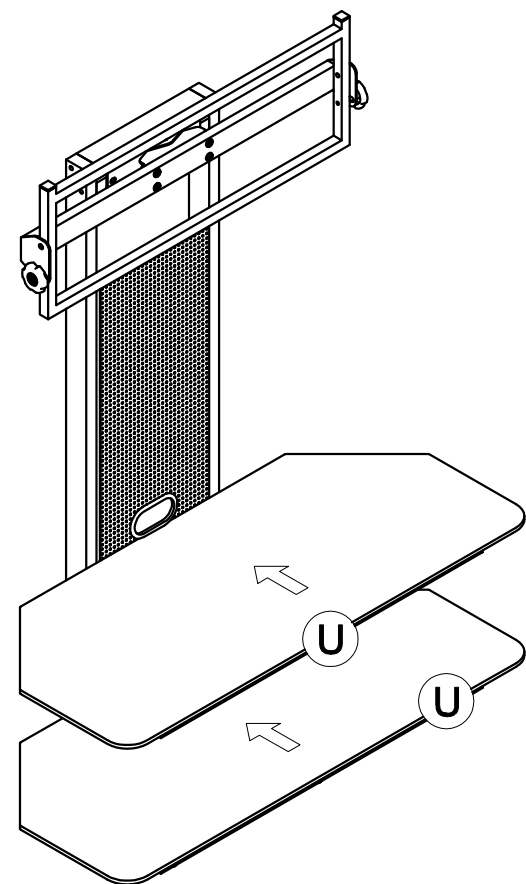

STEP 7

- Attach the TV mounting bracket to the TV;
* Choose only one screw(S5-S8),one washer(S9-S10), and one spacer(S11-S13)that fit your TV.keep all other parts for future use. Secure the mounting bracket on the back of the TV.

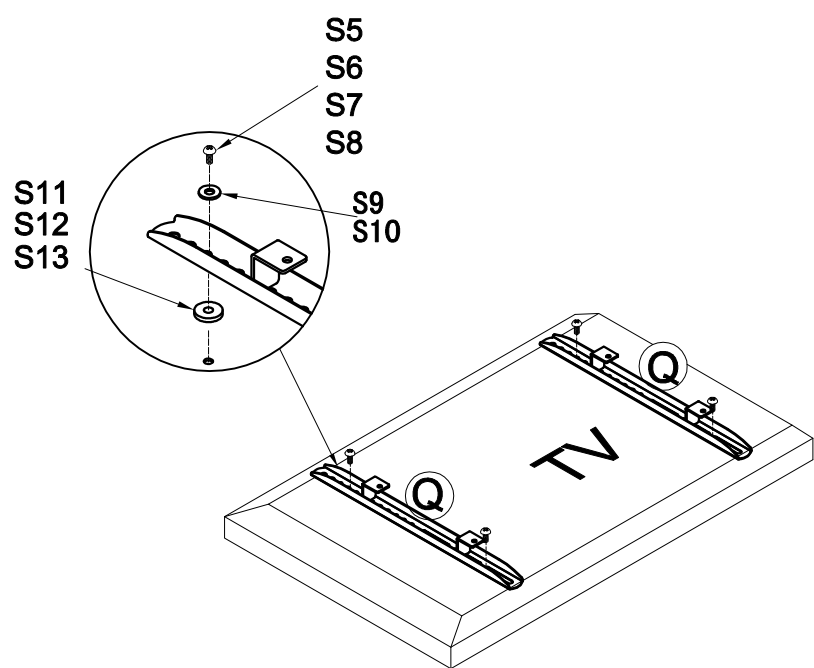

STEP 8

- Hang the TV to the main mounting bracket;
- Install the safety bolt(Part I) on the top anchors only.
* There is no bolt for the lower anchors.

